


HYPER GO

1:12 RC HIGH SPEED CAR USER MANUAL

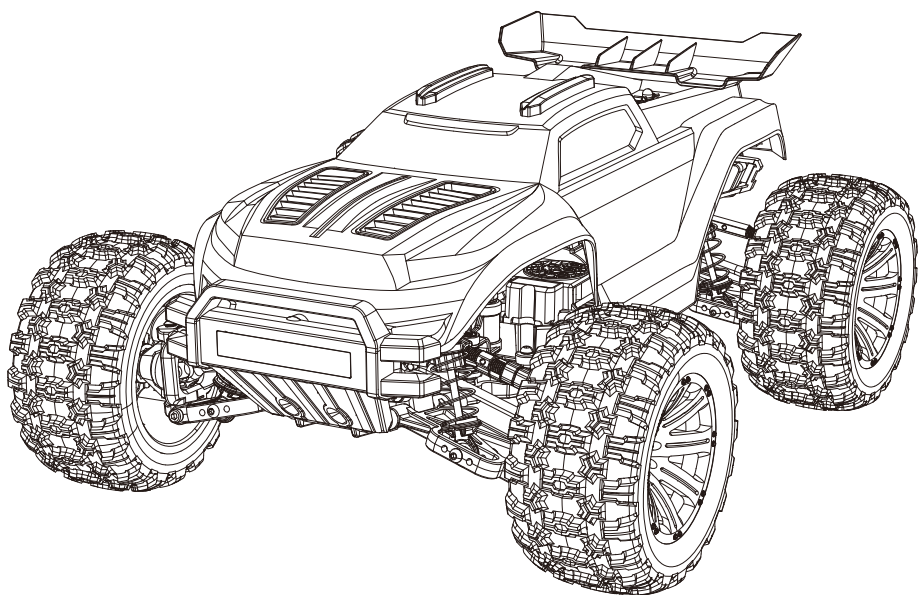

The instruction sheet for this product is just for your reference. We reserve the right to make changes or adjustments on the product without prior notification. Please refer to the official information.

Warning:

Choking hazard! This product contains small parts. NOT suitable for children under 3 years. Contains electrical components and should be kept dry at all times. Regularly check the battery charger wires, plugs and shell and other components for damage. DO NOT use if any part is damaged.

Warnings & Cautions

1. Detachable small parts should be stored safely and out of reach of children.
2. If interference is experienced, turn the model off and try it again in a different area.
3. Transmitter will not function correctly if the batteries are low. Please replace the batteries.
4. Please discard old/used batteries in a safe manner. Consider your environment!
5. Please store the remote control model in cool, dry place.
6. DO NOT expose to fire or high temperatures, do not store in moist place.
7. Once the battery get wet, wipe immediately with a soft dry cloth.
If the battery any deformation, please stop using.
8. If you don't use the model for a long time, please raise the chassis to let the wheels hang in the air.

Precautions for Battery Use

1. Transmitter uses 4x1.5V "AA" batteries.
2. Please pay attention to correct polarity when replacing batteries.
3. Rechargeable batteries should be charged under adult supervision.
4. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
5. After the battery is exhausted, the model should be removed.
6. Exhaust battery should be safety dispose!
7. DO NOT short circuit any terminals.
8. DO NOT attempt to recharge non rechargeable batteries.
9. Remove batteries from the model when charging.
10. DO NOT put batteries into a fire or into water.
11. The rated input voltage battery charger MUST be suitable for your mains power voltage.
12. During charging it is quite normal for the charger and batteries to heat up.
13. Do not swallow battery!
14. Store only in cool, dry and dark places and should be keep out of the children!
15. When the battery leaks the liquid and let it into you eyes, please right away rinse them and consult an ophthalmologist.

Safety Precautions

- It is a radio control model, not a toy!
- In order to enjoy running the car, you need to finish assembly before operation. Do routine maintenance work after operation. Replacement parts and option parts are available separately.
- Improper usage with Alkaline cells or rechargeable batteries may damage the electronics for the car or the radio.


In order to operate the car safely. Be sure that you have observed the following points:



Please follow the points as below in order to prevent accident from happening to the car and people.



- Be sure to read thoroughly the manual before you begin. Fresh user should seek advice from people having rich experience in order to assemble the model correctly.

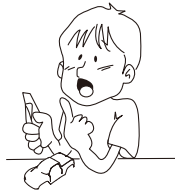


- Cutters, nippers and screwdrivers need careful handling.



- As the product contains small and sharp parts, assemble and store this product only in places out of the reach of children.



- Do not expose this model to high temperature, humidity or direct sunlight.

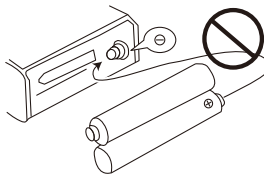

- Never reverse connection/ disassemble the battery. This may lead to damage and leakage.

- When the model is not in use, always turn off the receiver and transmitter. Further more, disconnect the batteries and remove them from the model and the transmitter. This may be dangerous such as overheat and leakage.

Operating Your Model Safely

⚠ Do NOT operate the model in the following places and situations. (Non-observance may lead to accident!)

- Operate your model in spacious and safe areas! Do not operate it:
 1. On road!
 2. In places where children and many people gather.
 3. In residential districts and parks!
 4. Do not operate the model on public roads, in crowded places and near infant as it may cause accidents.
 5. Indoors and in limited space! Non-observance may result in personal injury and property damage!
- The car must stop immediately and check for the reasons when it is operating abnormal. As long as the problem is not cleared, do NOT operate it! This may lead to further trouble and unforeseen accidents!
- Always check the radio batteries!
With weak dry batteries, transmission and reception of the radio would fall off. You may lose control of your model in such condition. This may also cause serious accidents!
- Keep in mind that people around you may also operate a radio control model!
NEVER share the same frequency with somebody else at the same time! Otherwise, Radio signals will be mixed up and you will lose control to your model. This may lead to accidents.
- Do NOT put fingers or any objects inside rotating and moving parts!
- Right after use, do NOT touch the motor! Danger of burning yourself!



FCC PART 15 B Notice: CAUTION

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

电池使用注意事项

1. 遥控器使用4节1.5V“AA”号电池；
2. 安装或更换电池时请注意极性；
3. 充电电池只能在成人监护下充电；
4. 不可混用新旧或不同型号的电池；
5. 电池电量用尽后，应从模型内取出；
6. 将耗尽电量的电池交给专门的环保部门处理！
7. 接线端不应短路；
8. 非充电电池不可充电；
9. 充电电池充电前应从模型中取出；
10. 请不要将坏的电池、电池组分解或扔到火中、水里，以免发生意外；
11. 充电器的额定输入电压必须与当地的家用电压相符；
12. 在充电过程中，充电器和电池出现微温，属于正常现象；
13. 不可吞咽电池！
14. 将电池放在凉爽、干燥避光及小孩接触不到的地方！
15. 电池漏液而且滴到眼睛里，请马上用大量的清水清洗，然后到附近的医院就医。



安全注意事项

1. 干电池或充电电池的不适当使用，会损害车或无线电的系统。
2. 模型只能使用推荐的充电器，充电器不是模型，可用液体清洗的模型清洁前应与充电器断开，定期检查充电器的电线、插头、外壳和其他部件是否损坏，发现损坏时应停止使用，直至修复完好。
3. 说明书含有重要信息，请予以保留。

Power Switch 开关

1. Turn on the power switch of the transmitter, the signal indicator light of transmitter flashes.
2. Press the power button of high speed car, the indicator light of high speed car flashes.
3. When the indicator light stays on, the high speed car can be operated to play.

1. 打开遥控器电源开关，遥控器信号指示灯闪烁。
2. 按下高速车电调的电源开关按钮，高速车指示灯闪烁。
3. 当指示灯变为常亮后，便可操控高速车。

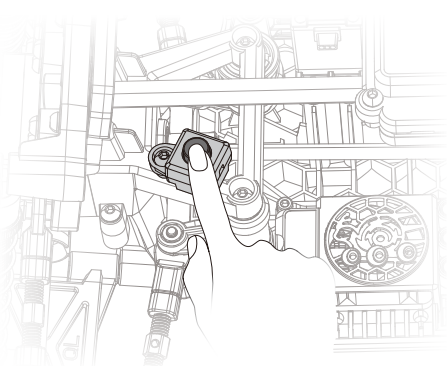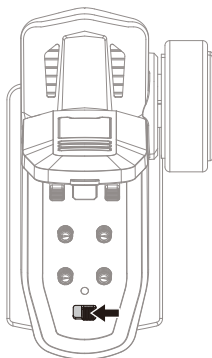




- When turn on the transmitter, please DO NOT touch the throttle and steering. After turn on the transmitter's power, please operate after the indicator light of transmitter staying on.
- Please comply the principle of "turn on the transmitter firstly, then turn on the high speed car".
- In the frequency matching, please make sure there is only one pair of transmitter and high speed car in matching at the same time, otherwise the frequency will match wrongly.

- 当准备开启遥控器时，请勿触动油门和转向。打开遥控器开关，遥控器指示灯点亮后才能进行操作。
- 开机时应遵循“先开启遥控器，再开启高速车”的原则。
- 在同一时刻，请确保对码的遥控器和高速车只有一对，否则会对错遥控器。


R30 Receiver 接收器

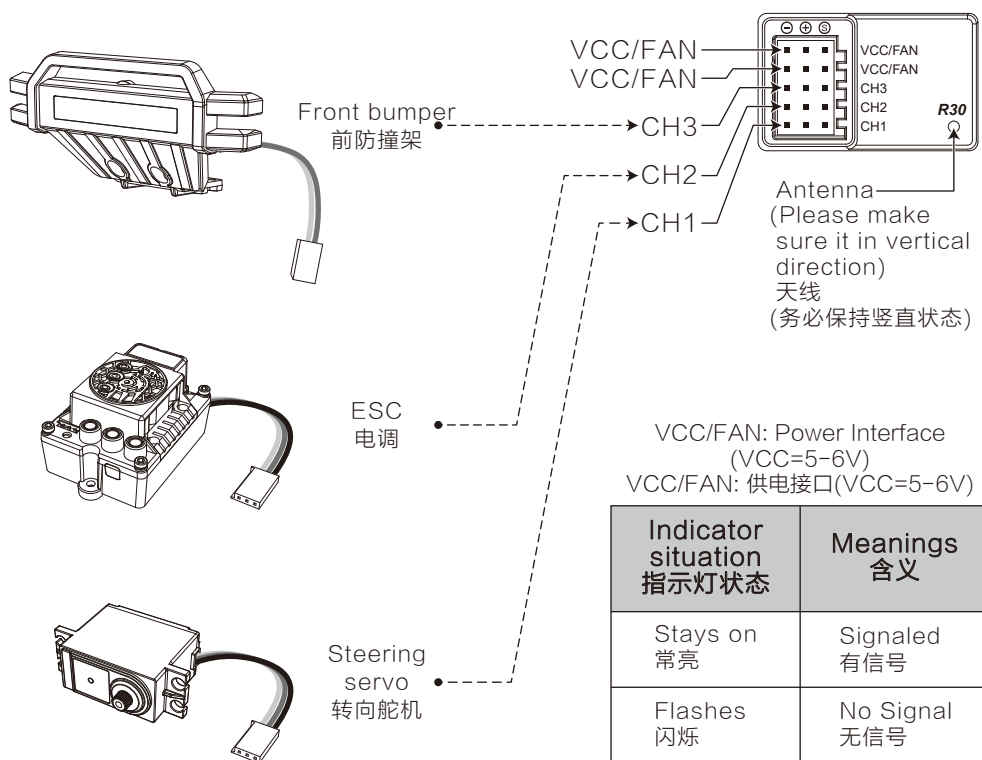

Warning: Please make sure the connection is correct.
警告：请注意连接是否正确。



E60A Brushless ESC 电调

⚠ Please Do Not forcible/reversely insert all sockets.
所有插座请勿强行反插。

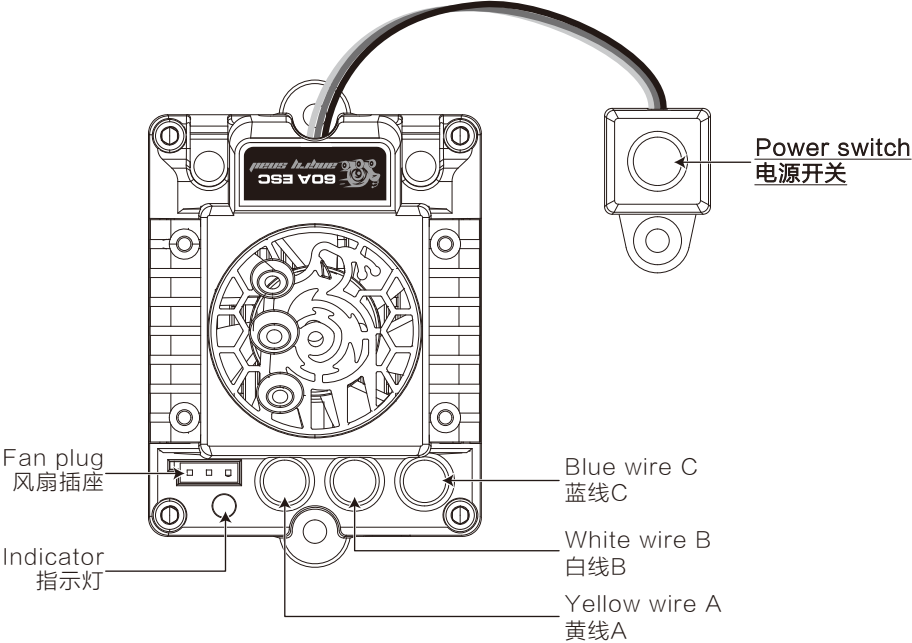


Indicator light situation 指示灯状态	Meanings 含义
Stays on 常亮	Signaled 有信号
Flash quickly 快闪	a. No signal 无信号 b. Pull the trigger 扣动扳机
Flash slowly 慢闪	Low voltage 低电压
Flash twice 闪两下	Over heat protection 过热保护
Off 熄灭	Stuck protection 堵转保护

T3D Transmitter 遥控器

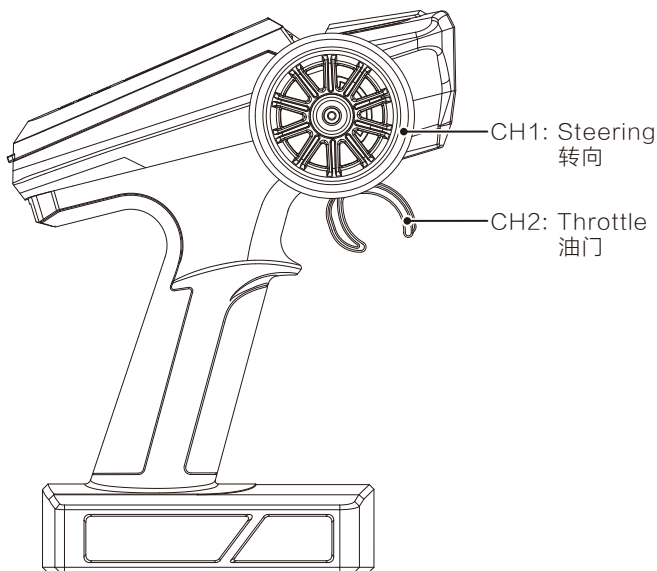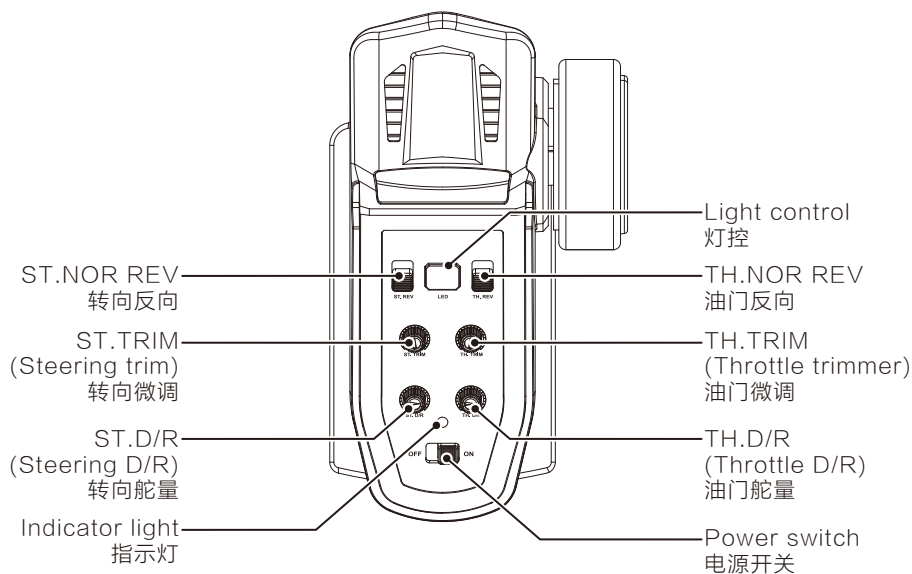

①ST.TRIM (Steering servo trimmer 转向舵机微调)


If the car cannot go straightly during driving, it can be adjusted through the ST.TRIM.
车辆行驶过程中如无法直线行驶，可通过此微调进行调整。

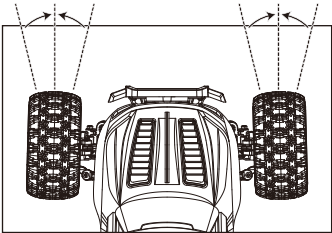

②TH.TRIM (Throttle trimmer 油门中位微调)

If the car can't stop when the TH is in the middle place, you can adjust the button to stop the car.

如TH（油门）在中位状态下，车辆无法正常停止，可通过此微调进行调节，使车辆停止。

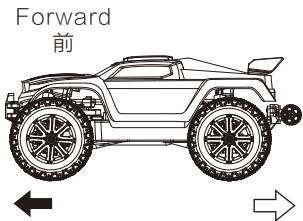


③Indicator light
指示灯


Stays on 常亮	Working well 正常
Flash quickly 快闪	Frequency mating 对码状态
Flash slowly 慢闪	Low battery of transmitter 遥控器电量低

④Fn(CH3 Light control)
灯控


Short Press the “□” button to turn on/off the light of high speed car.
短按“□”按键时，控制高速车灯光开启或关闭。

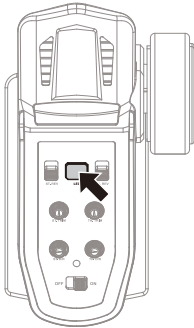

⑤CH1: ST (Steering 转向)

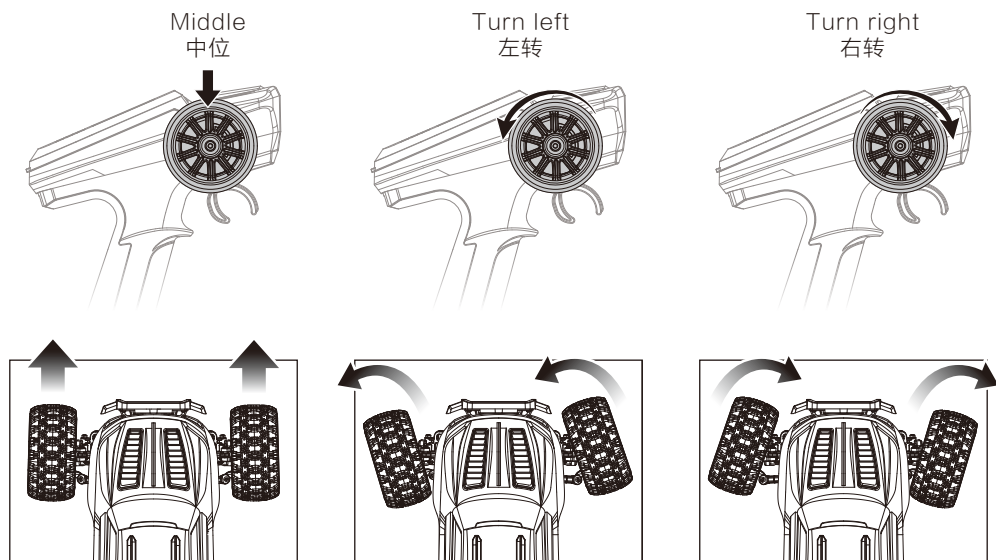

⑥CH2: TH (Throttle 油门)

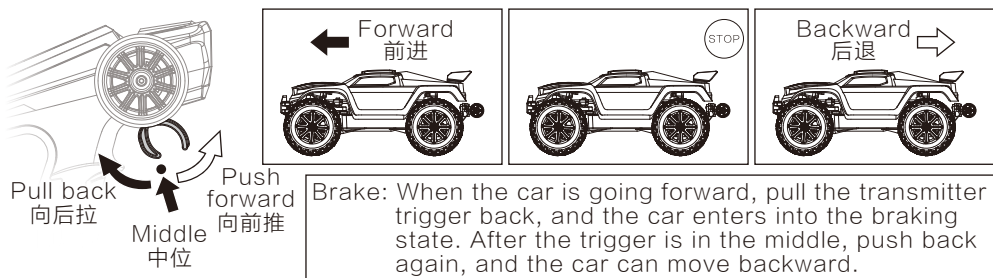

刹车：当车辆向前行驶时，遥控器推动后退，车辆进入刹车状态，需油门归中后，再次推动后退，车辆才能后退。


*When the car is in reverse situation, it does not the brake function.
车辆处于后退状态下，无刹车功能。

Install the Transmitter's Battery

遥控器安装电池

Open the transmitter's battery cover, insert 4 AA batteries according to the indicated positive and negative direction, close the battery cover.

将遥控器电池盖打开，按照遥控器指示的正负极，正确装入4节AA电池，再重新盖上电池盖。

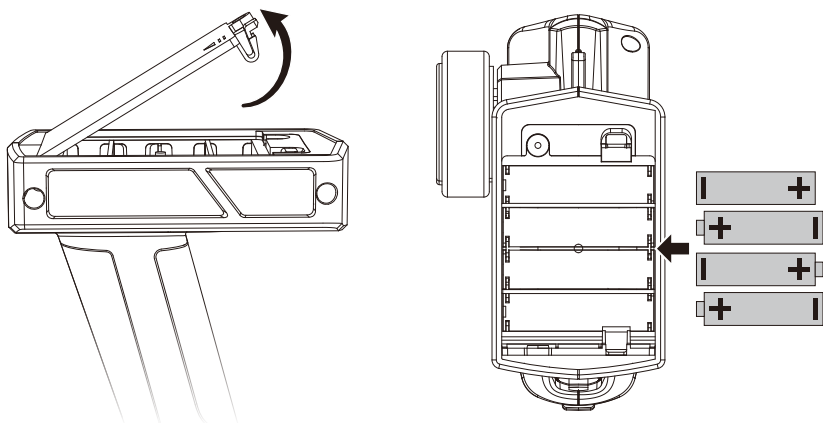

Charge 充电


It is recommended to use a 5V 2A adapter for charging.

- When charging, the indicator light of charger is green and flashes;
- When the battery is fully charged, the green indicator light of the charger stays on.

建议使用5V 2A USB适配器进行充电。

●电池充电时，充电器绿色指示灯闪烁；

●电池满电时，充电器绿色指示灯常亮。

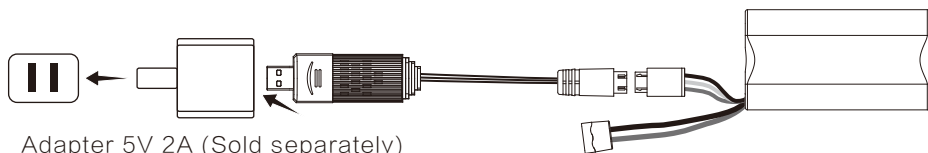


Adapter 5V 2A (Sold separately)

适配器5V 2A (需另购)

Install Car Shell 安装车壳


1. Insert the body into the front mount ① and press the latch vertically down to the rear mount ②.

将车壳插入前固定件①，车壳垂直下压到后车壳支架②。

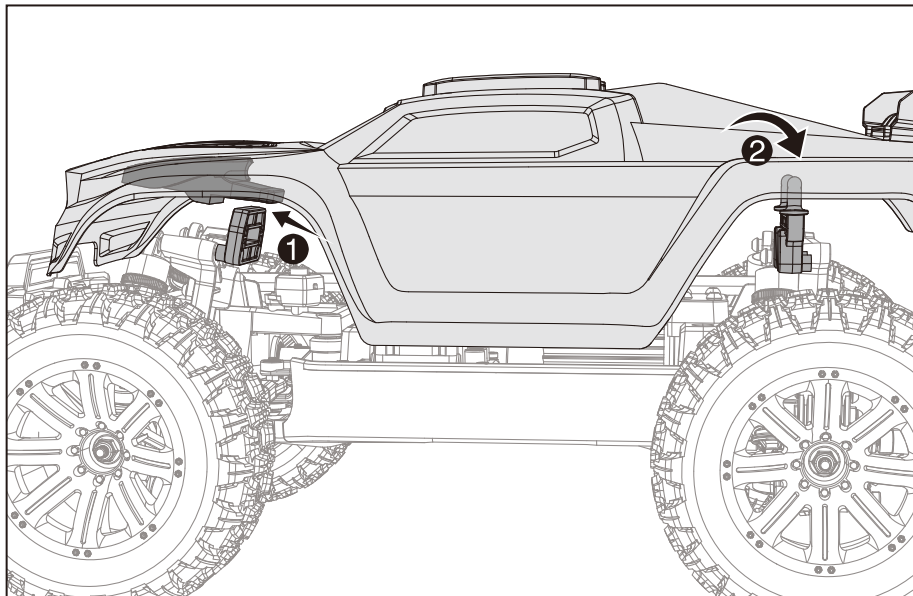

2. Insert the 2 clips into the holes to lock the car body.


将2个车壳扣插入锁紧车壳。

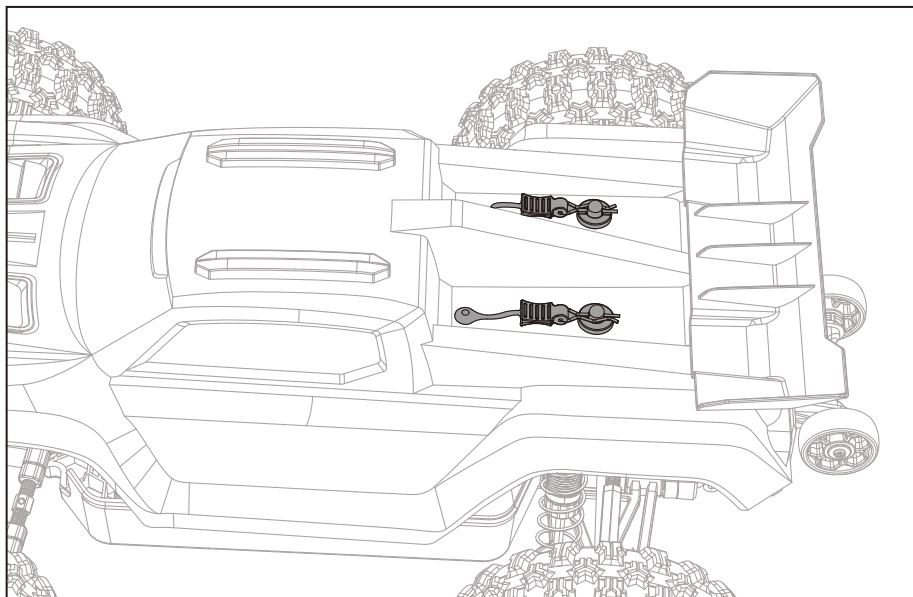


Front Swing Set 前摆臂组件

Screw 螺丝:


HTM3012 Ø3x12mm 2PCS



Screws 螺丝-----


HHM3016G Ø3x16mm 1PCS

Screws 螺丝-----


HTHM30325 Ø3x32.5mm 1PCS

Screws 螺丝-----

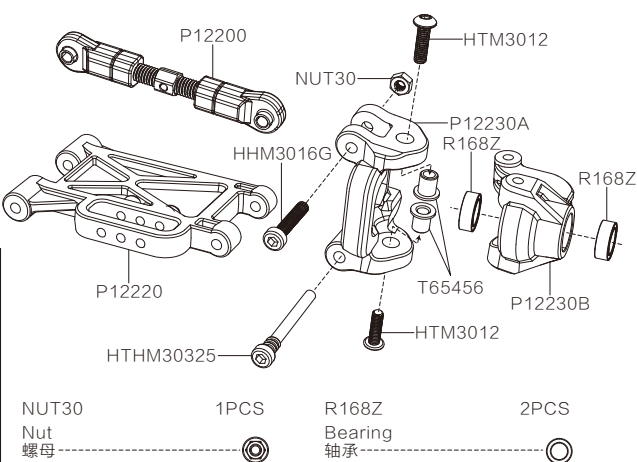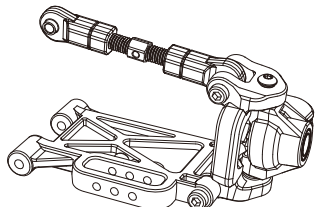

NUT30
Nut
螺母-----

1PCS


R168Z
Bearing
轴承-----

2PCS


Rear Swing Set 后摆臂组件



Screw 螺丝:


HHM3018 Ø3x18mm 1PCS

Screws 螺丝-----

HTHM30325 Ø3x32.5mm 1PCS


Screws 螺丝-----

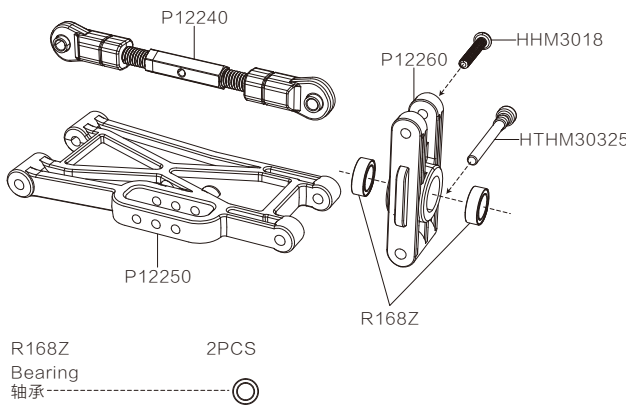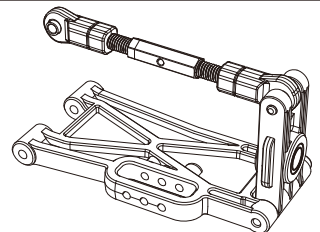


R168Z
Bearing
轴承-----

2PCS


Metal Gears Main Driving Set 全金属主传动组件

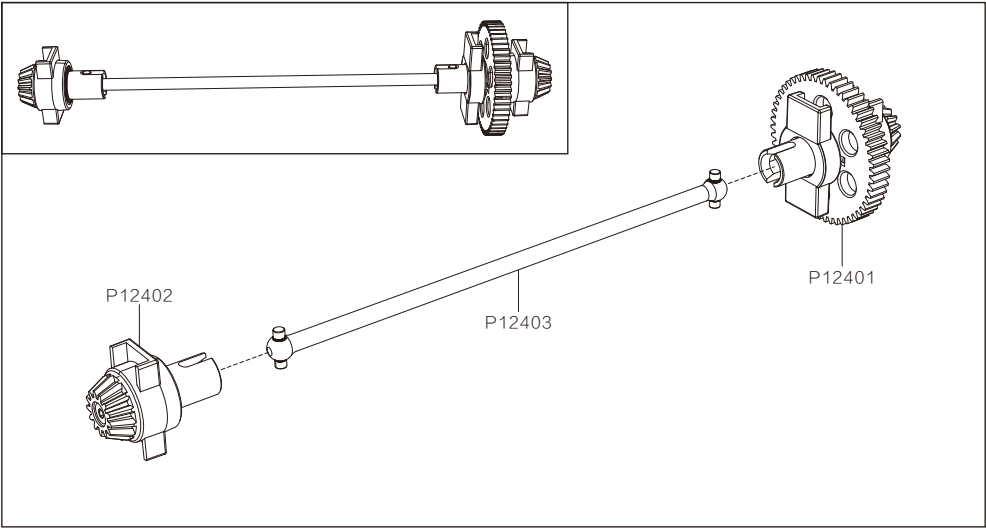

Oil Filled Shock 油压避震

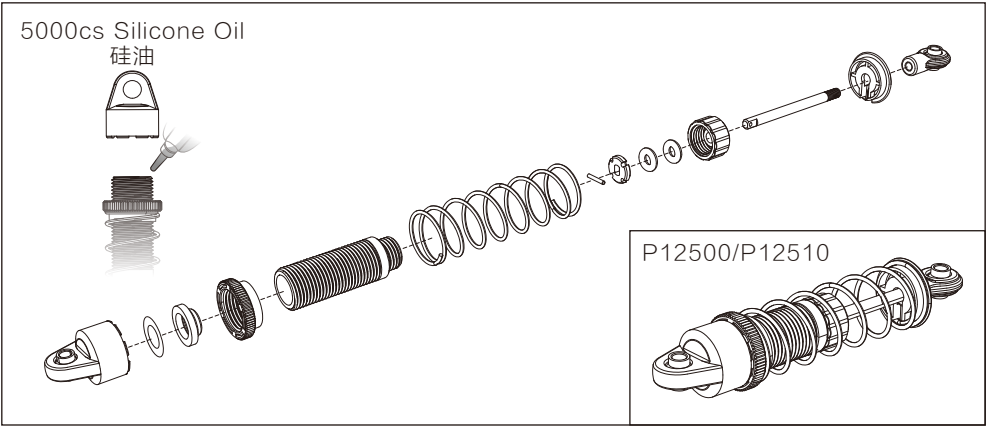

Servo Assembly 舵机组件

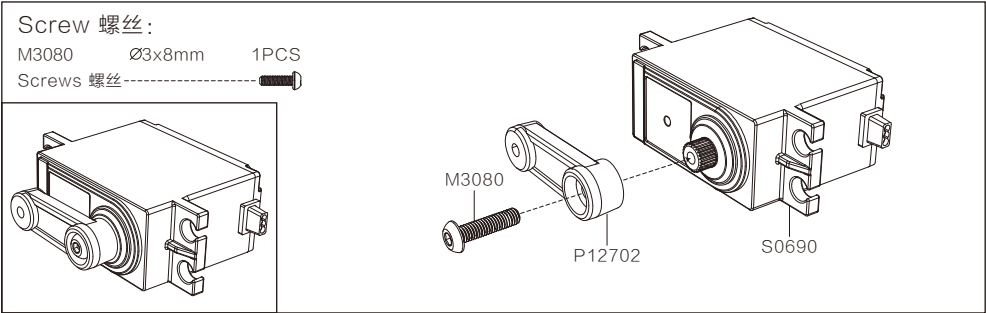

Front/Rear Differential 前/后差速器

Screw 螺丝:

HKM3016 Ø3x16mm 4PCS


Screws 螺丝-----

Bearing 轴承:

BRG10154 2PCS

Ball bearing

滚珠轴承-----

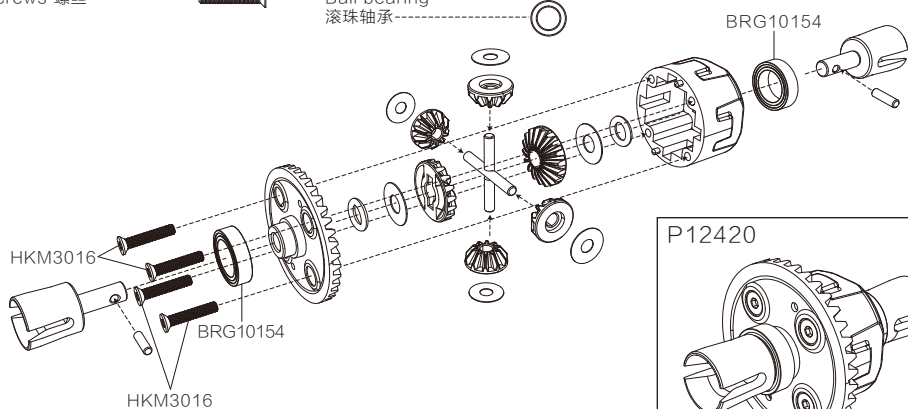

Motor Assembly 电机组件

Screw 螺丝:




HHM3010 Ø3x10mm 2PCS

Screws 螺丝-----


HWM4030 Ø4x3mm 1PCS

Screws

内六角机丝螺丝-----

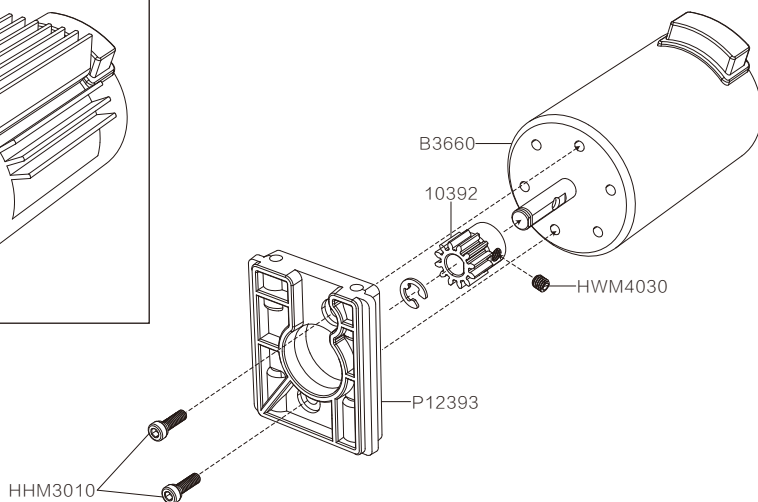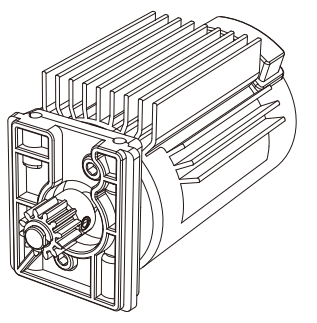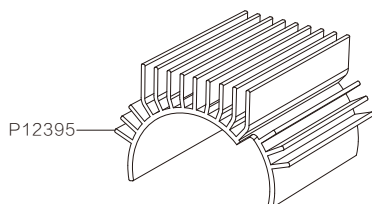

Steering Assembly 转向传动组件

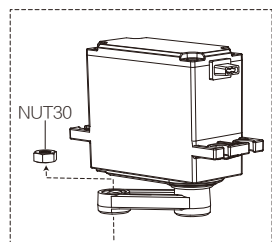

Screw 螺丝:

HTM3014 Ø3x14mm 2PCS

Screws 螺丝

HTM3020 Ø3x20mm 2PCS



Screws 螺丝

NUT30 4PCS

Nut 螺母

R168Z 4PCS

Bearing 轴承-----

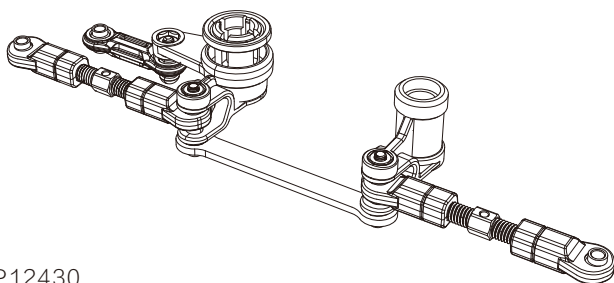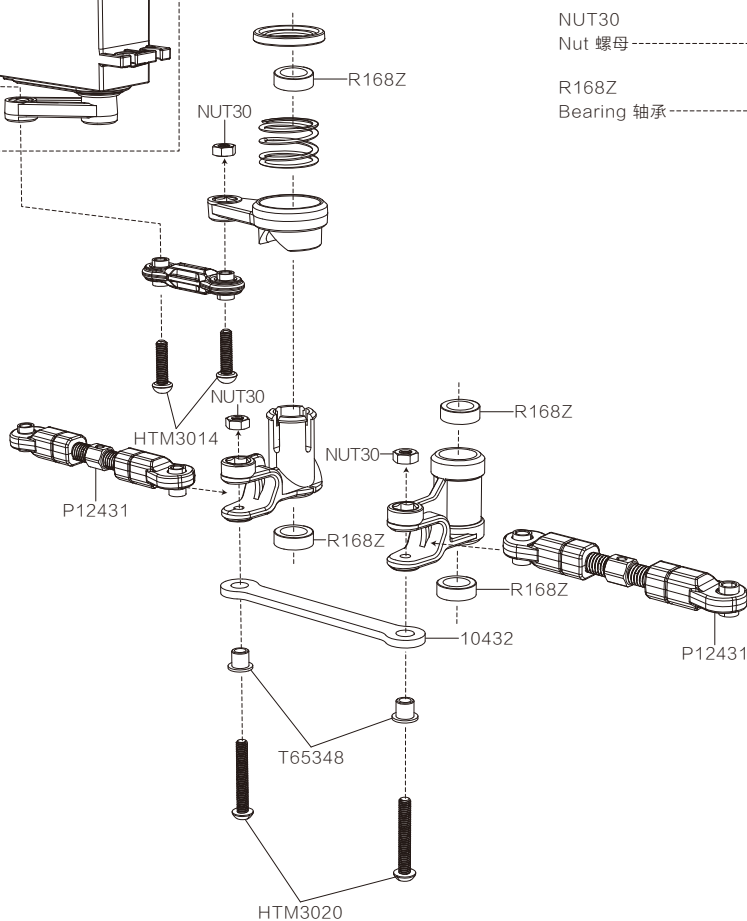

P12430

Front Bumper Assembly 前防撞组件

Screw 螺丝:

HHM3080 Ø3x8mm 4PCS

Screws 螺丝

HHM3010 Ø3x10mm 2PCS

Screws 螺丝

MTB1750

HHM3010

HHM3080

MTB1750 Ø1.7x5mm 1PCS

Screws 螺丝

P12100

Rear Bumper Assembly 后防撞组件

Screw 螺丝:

HHM3014 Ø3x14mm 4PCS

Screws 螺丝

MPWB2612 Ø2.6x12mm 2PCS

Screws 螺丝


MPWB2612

HHM3014

MPWB2612


P12110

High Speed Car Assemble 高速车总装

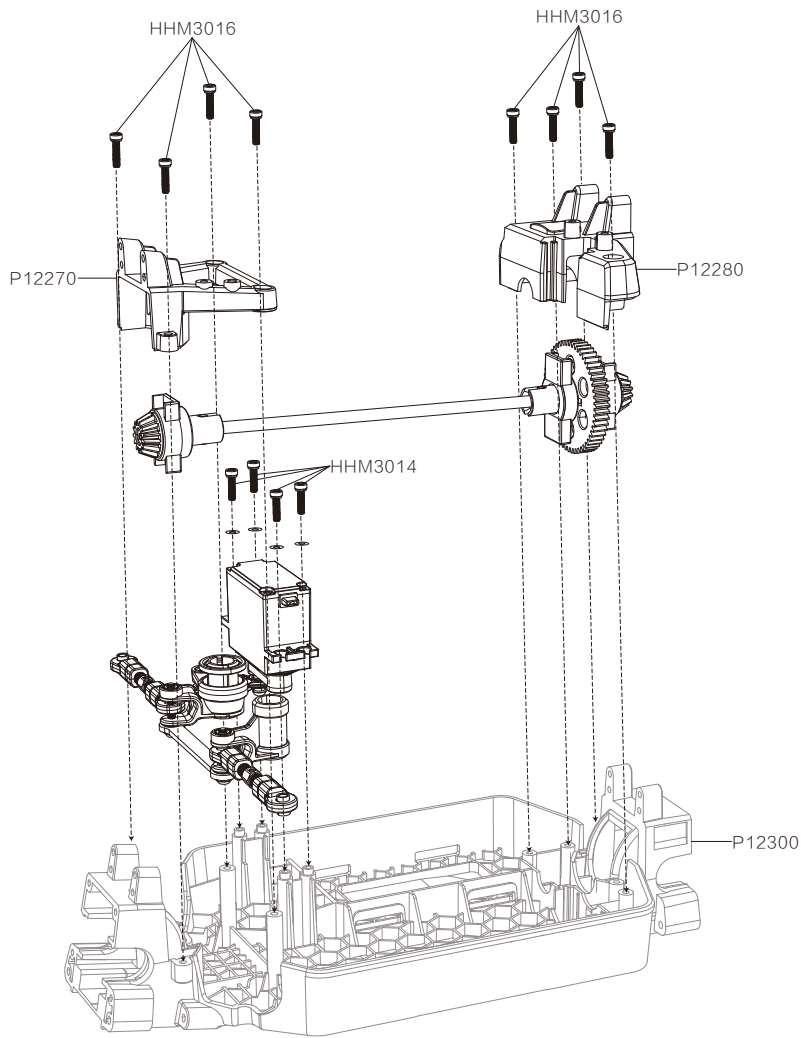


Screw 螺丝:

- HHM3016 Ø3x16mm 8PCS
Screws 螺丝
- HHM3014 Ø3x14mm 4PCS
Screws 螺丝

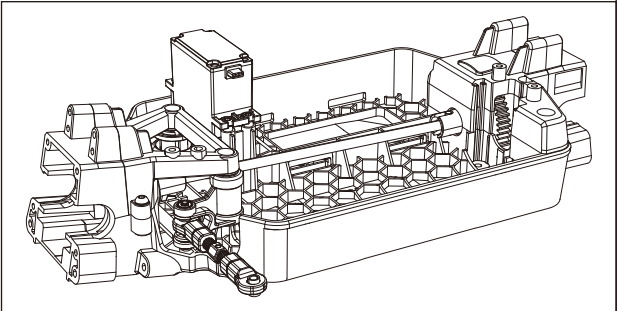


High Speed Car Assemble 高速车总装

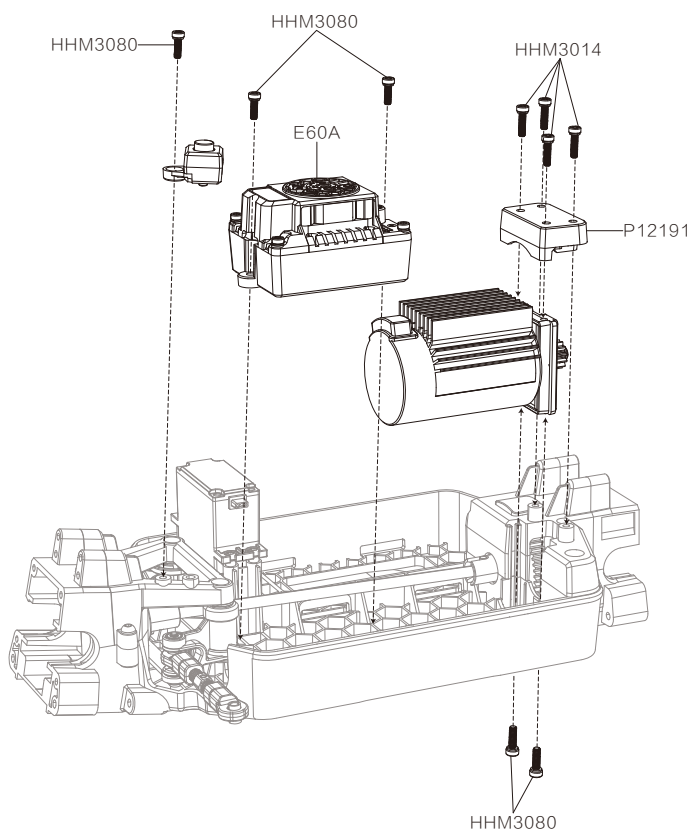


Screw 螺丝:


- HHM3080 Ø3x8mm 5PCS
Screws 螺丝
- HHM3014 Ø3x14mm 4PCS
Screws 螺丝

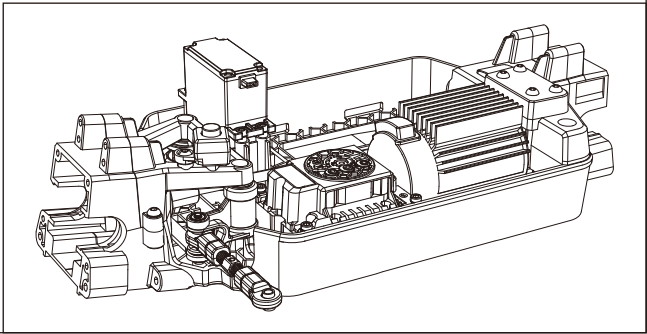


High Speed Car Assemble 高速车总装

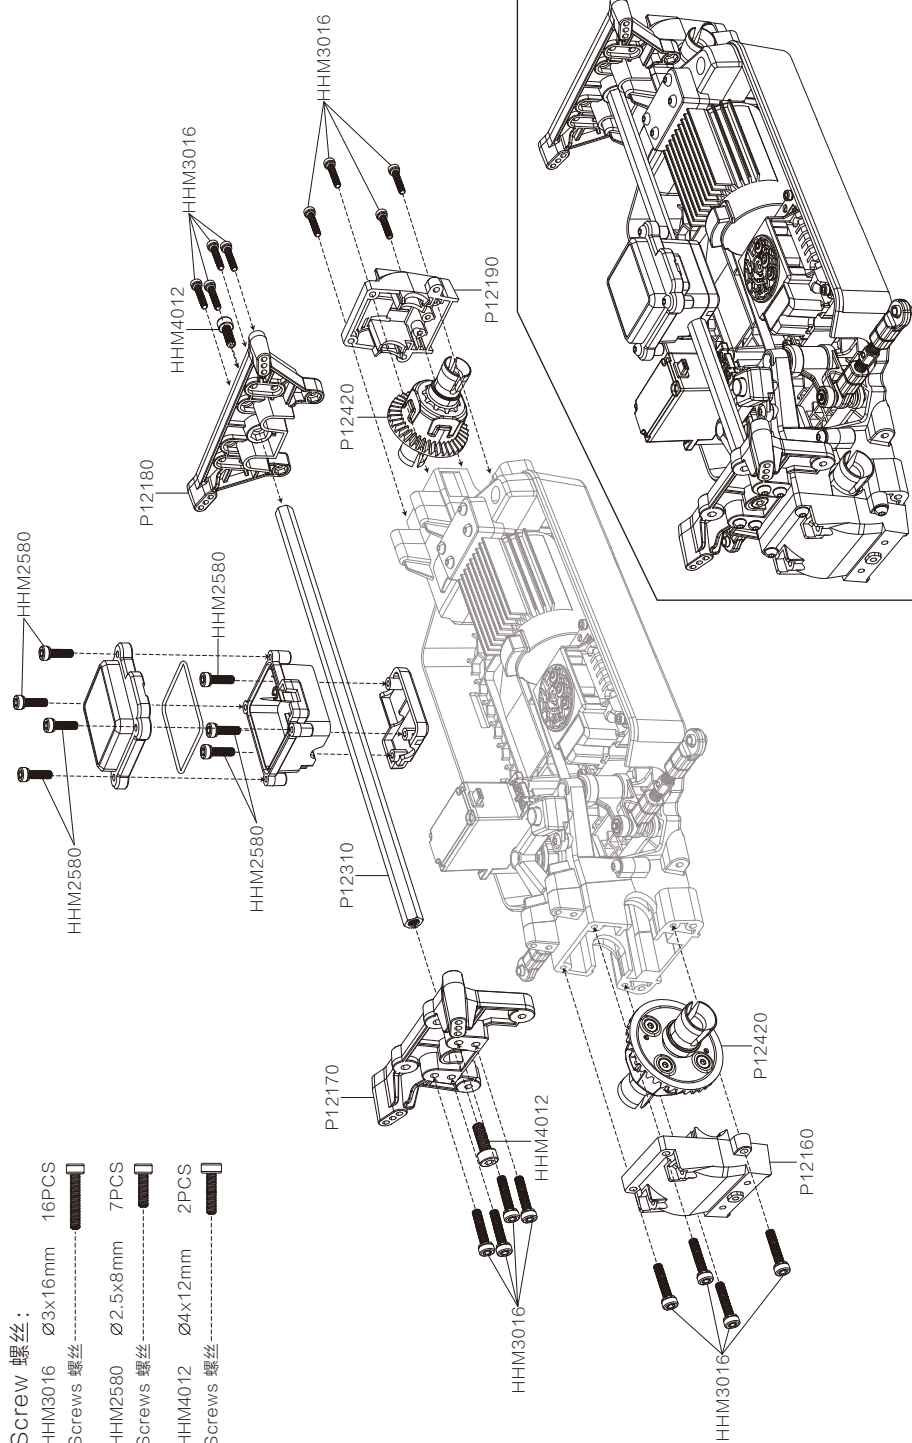

High Speed Car Assemble 高速车总装

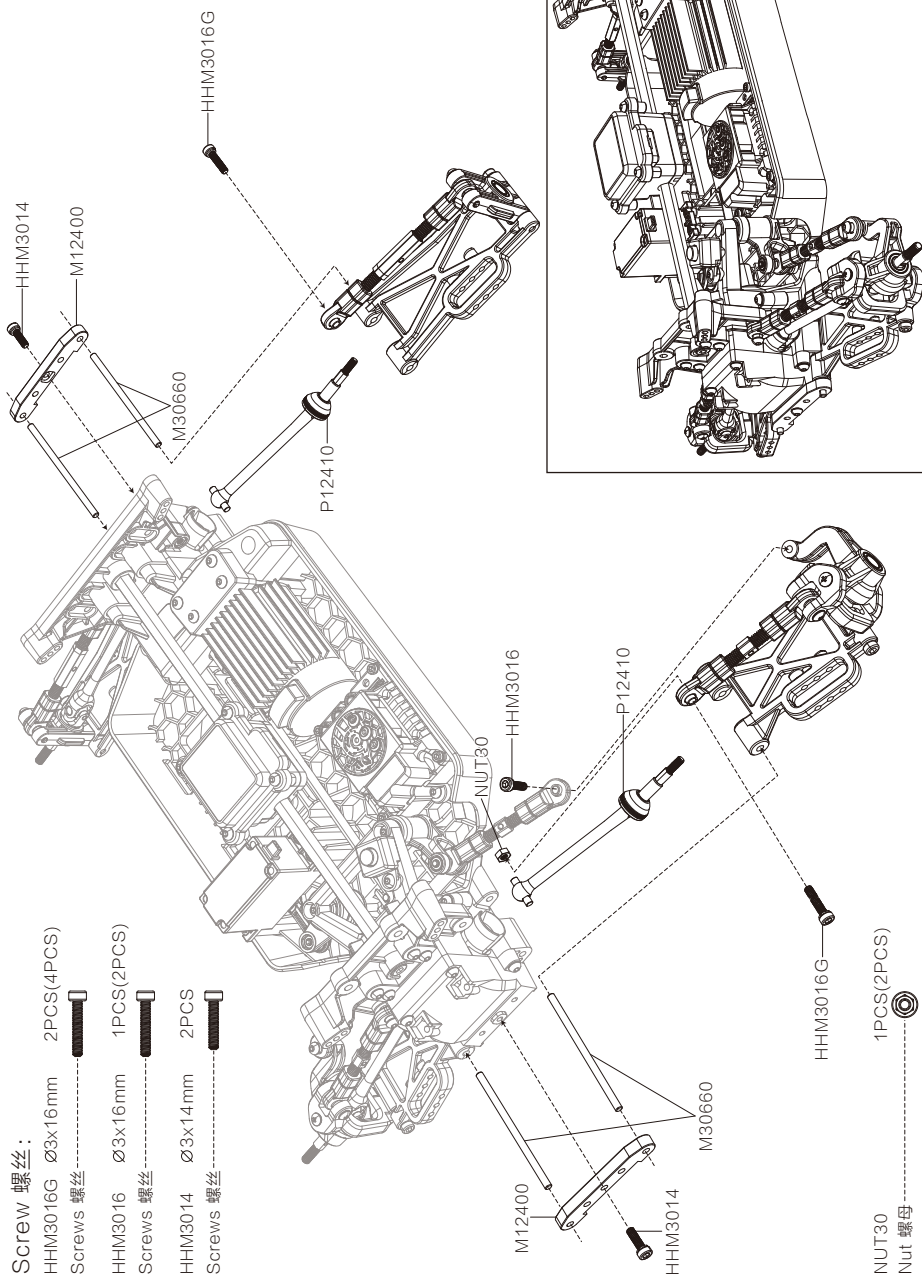

High Speed Car Assemble 高速车总装

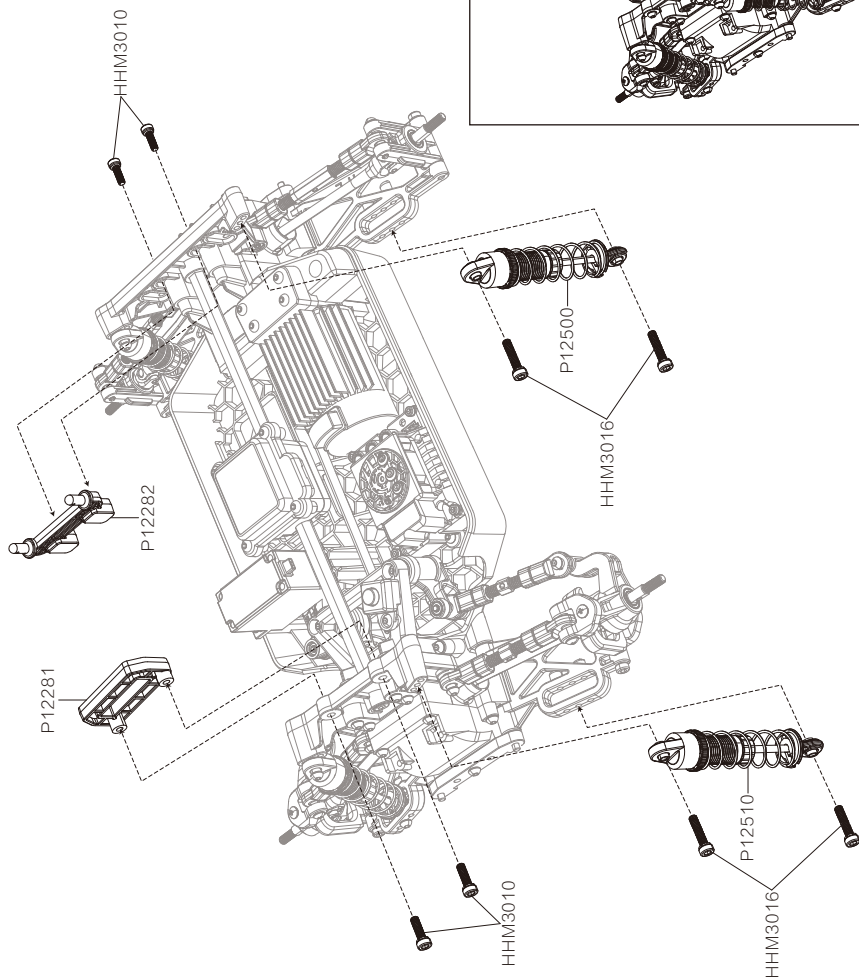

Screw 螺丝:

HHM3016 Ø3x16mm 4PCS

Screws 螺丝

HHM3010 Ø3x10mm 4PCS

Screws 螺丝

High Speed Car Assemble 高速车总装




Screw 螺丝:

HHM3014 Ø3x14mm 8PCS

Screws 螺丝




HHM3080 Ø3x8mm 8PCS

Screws 螺丝

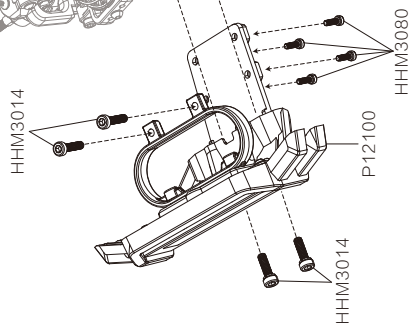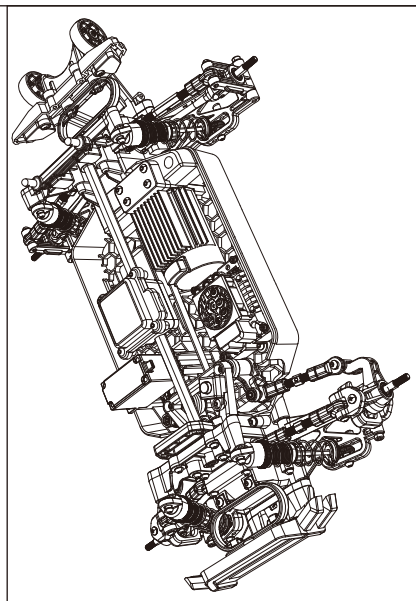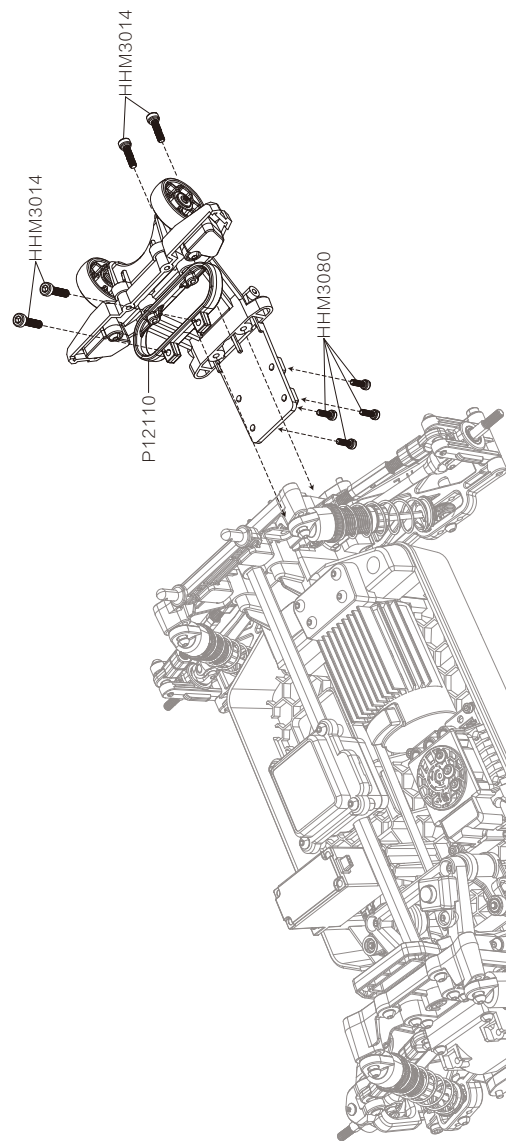

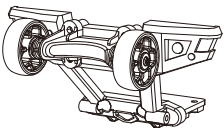
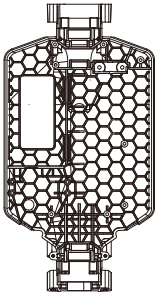

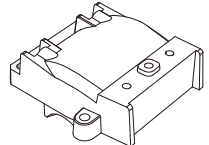
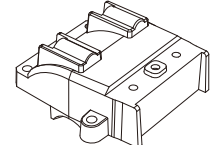
 
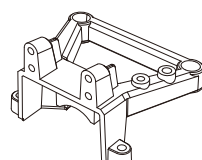
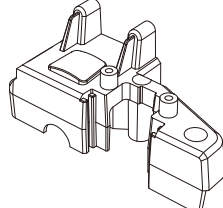
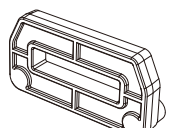
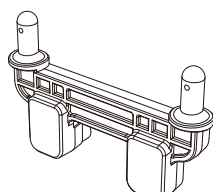


High Speed Car Assemble 高速车总装











 

Nut 螺母:
M40 1PCS (4PCS)
M4 Wheel lock nut
M4螺母-----

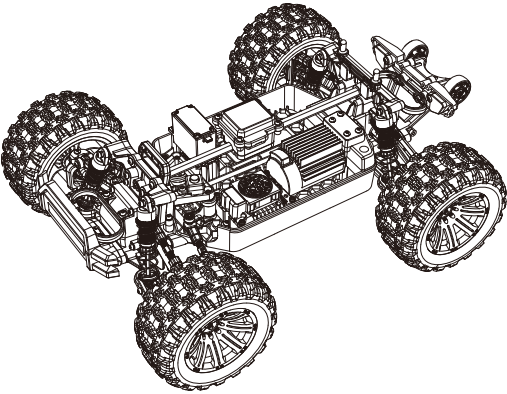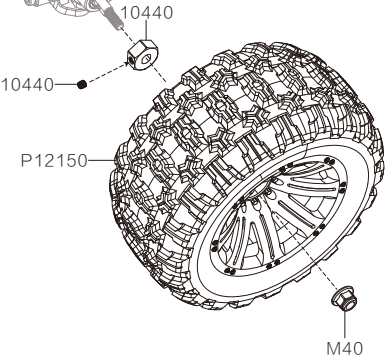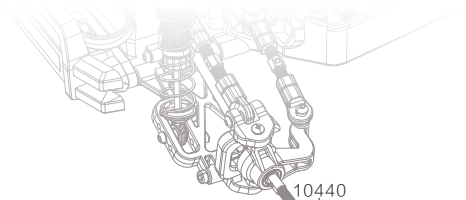



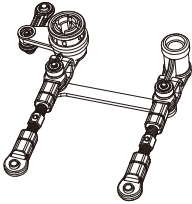
 
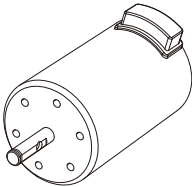
 
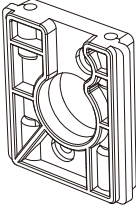
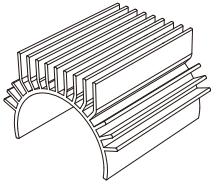
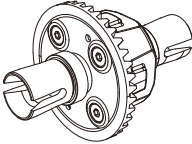
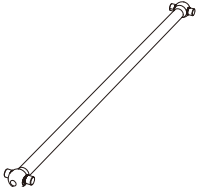
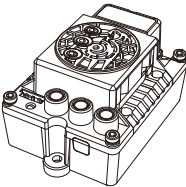

Spare Parts 配件表

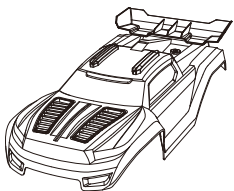			
P1230A	P12100	P12110	P12300
Body 车壳组件	Front Bumper Assembly 前防撞组件	Rear Bumper 后防撞	Chassis 底盘
			
P12310	P12160	P12190	P12191
Center Brace Bar 中支撑杆	Front Upper Gearbox Covers 前齿轮盖	Rear Upper Gearbox Covers 后齿轮盖	Vise Jaw 波箱盖
			
P12270	P12280	P12281	P12282
Front Support 前支架	Rear Support 后支架	Front Body Pillars 前车壳支架	Rear Body Pillars 后车壳支架





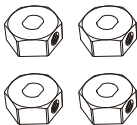
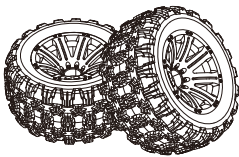
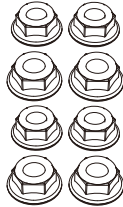
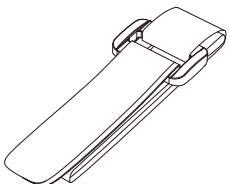
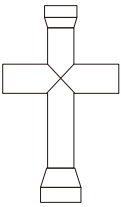
 
 
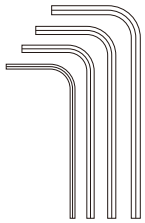
Spare Parts 配件表

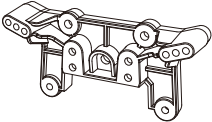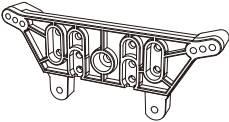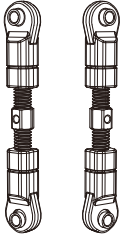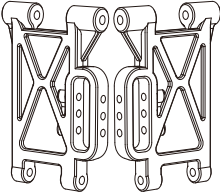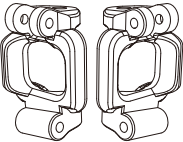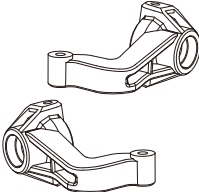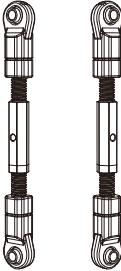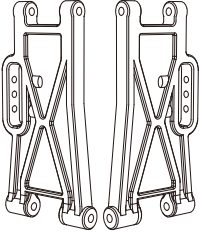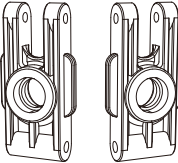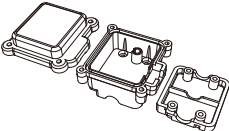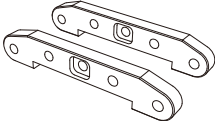			
P12170	P12180	P12200	P12220
Front Shock Tower 前避震架	Rear Shock Tower 后避震架	Rod 拉杆	Front Lower Suspension Arms 前下摆臂
			
P12230A	P12230B	P12240	P12250
Steering Block 转向座	Steering Block 转向座	Rod 拉杆	Rear Lower Suspension Arms 后下摆臂
			
P12260	14320B	M30660	M12400
Rear Hubs 后固定座	Receiver Box 接收盒	F/R Lower Swing Arm Fixed Shaft 下摆臂固定轴	F/R Reinforced Sheet 前后加强件

Spare Parts 配件表

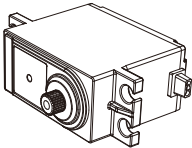			
S0690	P12702	P12430	10432
Servo 舵机	Servo Swingarm 舵机摆臂	Steering Assembly 转向传动组件	Connecting Rod 转向连杆
			
B3660	10392	P12393	P12395
Brushless Motor 无刷电机	Motor Pinions 电机输出齿	Motor Guard 电机固定座	Motor Heatsink 散热片
			
P12420	P12403	E60A	R30
Front/Rear Differential 前/后差速器	Centre Drive Shaft 主轴	Brushless ESC 无刷电子调速器	Receiver 接收器

Spare Parts 配件表

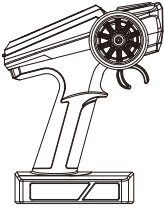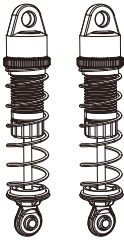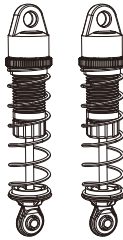			
T3D	P12510	P12500	P12410
Transmitter 遥控器	Oil Filled Shock (Front) 油压避震(前)	Oil Filled Shock (Rear) 油压避震(后)	Metal F/R CVD Shafts (2 Sets) 轮胎转动组件
 			
10440	P12150	M40	BD2217
Wheel Hex 六角套	Wheel Assembly 车轮组件 (2PCS)	M4 Wheel Lock Nut M4螺母 (8PCS)	Battery Base 电池固定带 (2PCS)
			
P812	T65456	T65348	PH04
Hexagonal Wrench 六角扳手	Bushing 轴套 (8PCS)	Bushing 轴套 (8PCS)	Screwdriver Sets 螺丝刀套装

Screws 螺丝

M3080	Ø3x8mm	12PCS
HTM3012	Ø3x12mm	12PCS
HTM3014	Ø3x14mm	12PCS
HTM3020	Ø3x20mm	12PCS
HHM2580	Ø2.5x8mm	12PCS
HHM3080	Ø3x8mm	12PCS
HHM3010	Ø3x10mm	12PCS
HHM3014	Ø3x14mm	12PCS
HHM3016	Ø3x16mm	12PCS
HHM3016G	Ø3x16mm	12PCS
HHM3018	Ø3x18mm	12PCS
HHM4012	Ø4x12mm	12PCS
HTHM30325	Ø3x32.5mm	12PCS
HKM3016	Ø3x16mm	12PCS
MPWB2612	Ø2.6x12mm	12PCS

Others 其他

BRG10154	Bearing 轴承	8PCS
R168Z	Bearing 轴承	8PCS
M40	Ø4mm Nut 螺母	8PCS
NUT30	Ø3mm Nut 螺母	12PCS

微功率短距离设备相关规定要求如下：

- （一）符合“微功率短距离无线电发射设备目录和技术要求”的具体条款和使用场景，采用的天线类型和性能，控制、调整及开关等使用方法；
- （二）不得擅自改变使用场景或使用条件、扩大发射频率范围、加大发射功率（包括额外加装射频功率放大器），不得擅自更改发射天线；
- （三）不得对其他合法的无线电台（站）产生有害干扰，也不得提出免受有害干扰保护；
- （四）应当承受辐射射频能量的工业、科学及医疗（ISM）应用设备的干扰或其他合法的无线电台（站）干扰；
- （五）如对其他合法的无线电台（站）产生有害干扰时，应立即停止使用，并采取措施消除干扰后方可继续使用；
- （六）在航空器内和依据法律法规、国家有关规定、标准划设的射电天文台、气象雷达站、卫星地球站（含测控、测距、接收、导航站）等军民用无线电台（站）、机场等的电磁环境保护区域内使用微功率设备，应当遵守电磁环境保护及相关行业主管部门的规定；
- （七）禁止在以机场跑道中心点为圆心、半径5000米的区域内使用各类模型遥控器；
- （八）微功率设备使用时温度和电压的环境条件；
- （九）使用微功率短距离无线电发射设备应当符合国家无线电管理有关规定。



MADE IN CHINA

Instructions must be retained since it contains important information.